D-Link®

COVr
Tri Band Whole Home Wi-Fi System

Simple **Setup** Guide

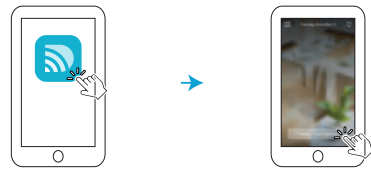There are two easy ways to set up your Covr Wi-Fi System

x 2   x 2   QIG

1 **D-Link Wi-Fi App Setup**

Download the D-Link Wi-Fi app from the App Store or Google Play.

Download on the **App Store**
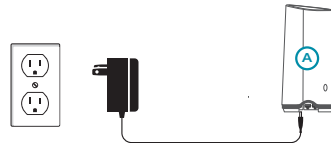GET IT ON **Google Play**
Q D-Link Wi-Fi

2 Tap **Install Your Device** and follow the on-screen instructions to complete the setup.
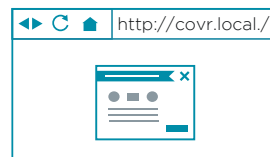
OR

1 **Web Browser Setup**

Connect the power adapter and plug in the Covr Point labeled **A**.

2 When the Covr LED is blinking amber, connect your PC or laptop to the Wi-Fi name (SSID) printed on the back of the device, or on the included Wi-Fi Configuration Card.
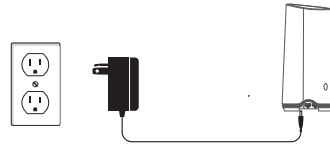
Wi-Fi
Wi-Fi

SSID:
Password:

3 Type **http://covr.local./** into a web browser and follow the on-screen instructions to complete the setup.

http://covr.local./

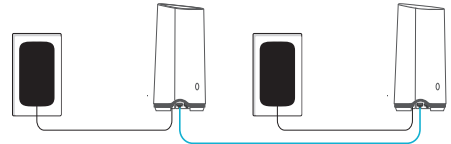# Adding extra Covr Points to expand your whole home Wi-Fi

1 Connect and plug in the new Covr Point close to any of your existing Covr Points and wait for it to boot up.
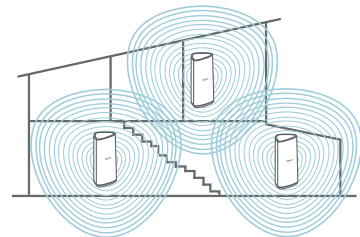
2 When the Covr LED is blinking amber, use an Ethernet cable to connect the new Covr Point to the existing Covr Point.
When the Covr LED on the new Covr Point turns solid white, the new Covr Point is paired and ready to use.

3 Disconnect the Ethernet cable and place the new Covr Point anywhere in your home to extend your whole home Wi-Fi.
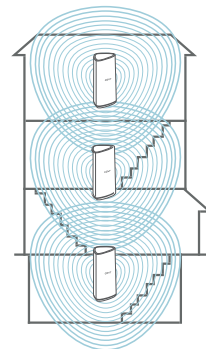
Check the LED indicator on your Covr Points to ensure proper connection.

Solid white: Strong signal.

Blinking white: Weak signal. Move your Covr Point closer to the other Covr Points until the LED turns solid white.